

Heated Sample Line Cleaning

Sean Myrick

Director, CEMS Operations


smyrick@escspectrum.com

Sample Lines Cleaning

Sample Lines

- Cleaning
 - Flush
 - Peristaltic Pump cycling
 - (For that tuff to get out dirt and grime)

Normal Flush

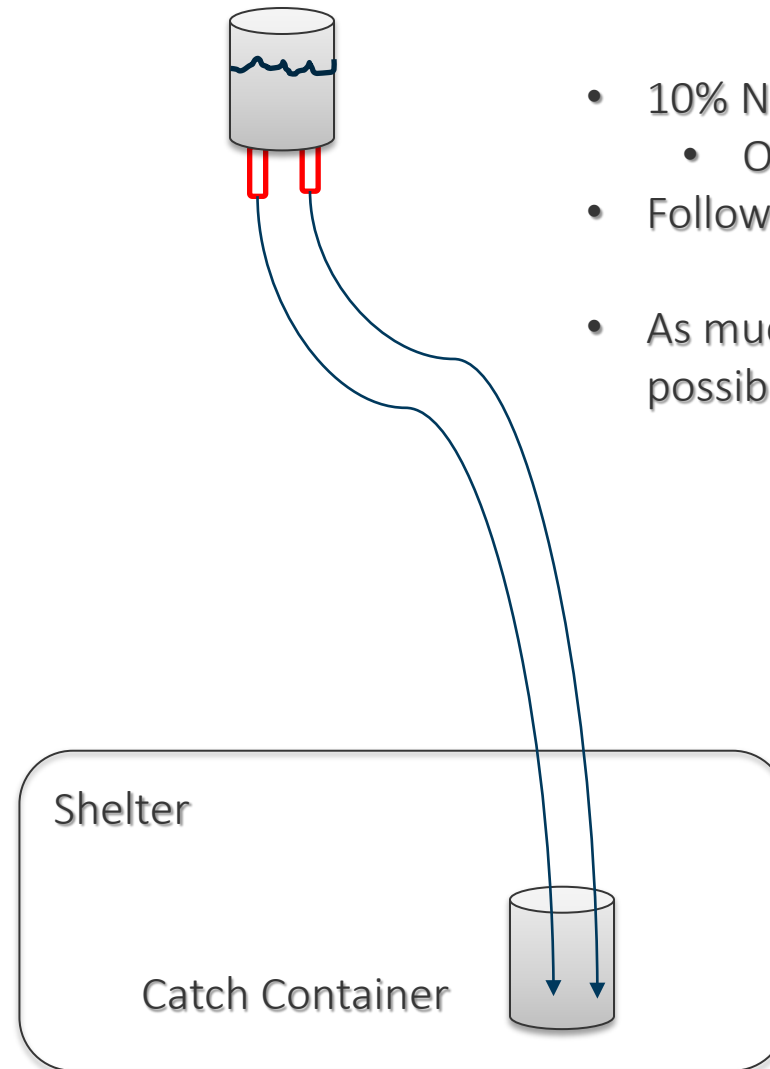


- 10% Nitric Acid Solution
 - Or Distilled Vinegar
- Followed by DI Water

- As much of each as possible

Cycle Flush

- Lower Sample line temp to $\sim 70^{\circ}\text{C}$
- 10% Nitric Acid Solution
 - Or Distilled Vinegar
- Followed by DI Water
- As much of each as possible
- Followed by Hot Dry Air

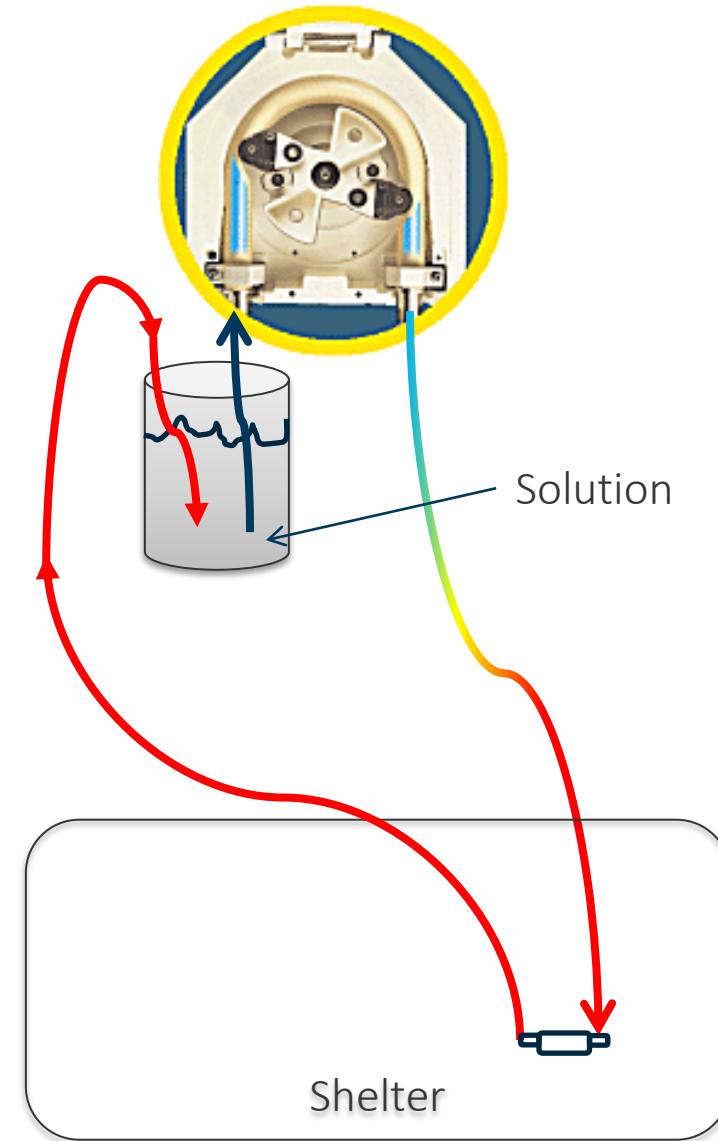

Peristaltic Pump

